




# *Core Acceptance Criteria Ignition Distributors*

To allow us to remanufacture your units, please follow the acceptance criteria when returning your core.

Your core part will not be accepted whenever the following defaults occur:

## **Dismantled Unit**

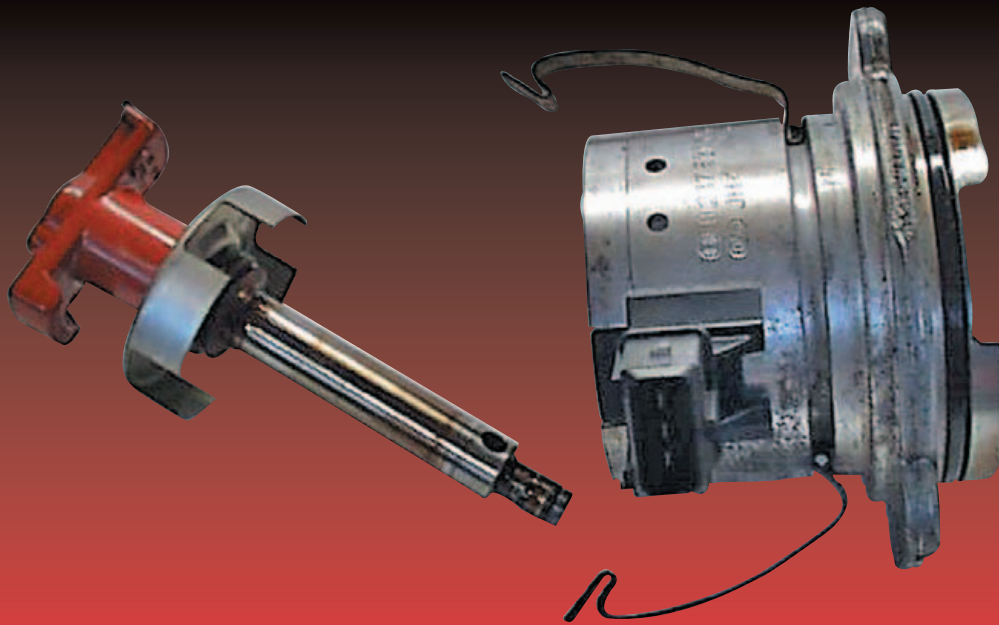

**Broken shaft**

**Broken lug**

**Damaged casting**

**Broken housing**

**Damaged casing / hole**

**Bracket damaged**