



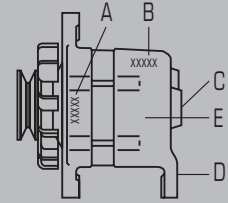

Where to find the OE-reference

Where to find the OE-reference

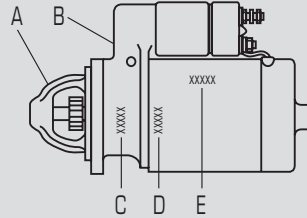

O.E.M.	Replaced by	STARTER		ALTERNATOR	
		Position	Example	Position	Example
BOSCH	(BO)	E	1112012	B	0120400903
DAIHATSU		E	28100-25021	B	27020-12012
DELCO-REMY	(DR)	D	165(3471165)	A	033(930830)
DUCELLIER	(DU) VALEO (VA)	D	6216,453028	C	7577,451038
FEMSA	(FE)	D/E	MTS12-47	C/D/E	ALS12X-76
FIAT	(FI)	B/E	77175430	B/A	
FORD		D	71BB 11000 LB	B	81AB 10300 AC
HITACHI	(HI)	D	S114-232	A/E	LR150-17
HONDA		B	31200-657-025	E	31100-PB2-004
ISKRA	(IS)	B	AZF3-519	B	AAK1181
LUCAS	(LU)	D/E	LRS 415	B/C	LRA 396
MARELLI	(MM)	B/E	63222408	B/C/E	63305101
MANDO	(MD)			E	AB170035
MAZDA		B/E	F805-18-400A	E	8042-18-300
MITSUBISHI	(MI)	B/E	M2T30581/MD001553	B/C/E	A5T10271
MOTOROLA	(MO)			B/C	9AL2679K
NIPPON DENSO	(ND)	E	028000-7092	B	021000-5290
NISSAN	(NI)	B/D	23300-M8100	A/E	23100-H7206
PAL	(PA)		028946.09	B	443113457
PARIS RHONE	(PR) VALEO (VA)	D	D8E63	B/C	A13N135
TOYOTA		E	28100-23011	E	27020-33011
SEV MARCHAL	(SEV) VALEO (VA)			B/C	71635202
FORD (VISTEON)		E	20-100-01111		



How to recognize an original part

